



**INTERNATIONAL WARRANTY
AND INSTRUCTION MANUAL**

INTERNATIONAL WARRANTY

This watch was made in Switzerland in compliance with the most stringent quality standards of the Swiss watch industry.

Your Teslar watch is internationally warranted by Vertime B.V. for a period of 24 (twenty-four) months from the date of purchase under the terms of this warranty. This warranty is only valid if your watch was purchased from an authorized Teslar retailer and if the warranty certificate has been duly filled in, signed and stamped by the retailer. With regard to e-commerce retailers, the warranty is valid only from authorised retailers. The data stated in the invoice of purchase replace the information needed in the warranty card.

This warranty covers all defects in material and workmanship existing at the time your Teslar watch was sold. This warranty does not cover damage caused by accidents, improper use, theft or loss of the watch. Also excluded from the warranty are the strap or bracelet, the battery and the crystal glass, as well as damage caused by

wear and tear and all direct or indirect damage caused by the aforementioned circumstances.

Any intervention on the watch by repairers not duly authorized by Vertime B.V. shall void this warranty.

Should your watch need servicing or repair, please contact the authorized retailer from whom the watch was purchased or one of the official after-sales service centres indicated on our website www.teslarwatches.com.

No one is authorized to alter the terms of this warranty. Any other form of warranty given by the retailer is entirely under the retailer's own responsibility.

Your watch has been successfully tested to resist to a pressure and depressure of 5 ATM minimum. It is advisable to have the watch serviced every 24 months.

INTERNATIONAL WARRANTY CERTIFICATE AND DIAMONDS WARRANTY

PROOF OF PURCHASE (VALID IN THE U.S.A.)

Reference _____

Serial Number _____

Warranty Extension Code _____

Date of Purchase _____

STORE STAMP

Diamonds warranty:
for pavés or single diamonds up to ct. 0,29
Colour: G/H - Clarity: SI

WATER RESISTANCE

All the Teslar watches are designed with a minimum water-resistance rating of 5 ATM.

The water-resistance of a timepiece protects the movement from dust, moisture, and risk of damage to the movement should it be immersed in water.

It is important not to attempt to adjust the position of the crown while the timepiece is in contact with water. Water can enter the case causing damage to the movement.

For timepieces with screw-down crowns, it is important to ensure the crown is in the proper position and completely locked before contact with water.

For timepieces with chronograph functions, do not engage the chronograph under water, as water may leak in the case and cause damage to the movement.

CARE AND PRECAUTION

Each Teslar watch is designed and manufactured to exceed the highest of standards. In order to ensure optimal performance and longevity from your timepiece, please review the simple guidelines for care and precautions of your Teslar watch.

CARE

Your watch should be cleaned with soft cloth and water only. Do not submerge your watch.

Your timepiece should be rinsed clean and dried with a soft cloth after any saltwater use. In order to maintain the “new look” of metal bracelets, we recommend periodic cleaning of the bracelet.

Dip a soft brush in warm soapy water and gently rub bracelet clean. We advise having your timepiece serviced every 24 months to ensure long use and trouble free operation.


PRECAUTIONS

Your timepiece is a complex integration of parts and components brought together by skilled craftsmen. There are certain actions or environmental situations that may damage or impede your timepiece’s ability to perform optimally.

It is important to avoid the following conditions: extreme heat or cold, as well as prolonged periods of exposure to direct sunlight, exposure to extreme heat or cold, as well as prolonged periods of exposure to direct sunlight, exposure to wet conditions that exceed your timepiece’s water rating (see case back and chart).

Never operate any of the function buttons or crown when timepiece is in contact with water. Your timepiece should not be affected by magnetic fields generated by household items such as televisions and stereos, but avoidance of other strong electric fields static electricity, which may interrupt mechanism, is suggested. It is also important to avoid extreme shock or impact.


QUARTZ WATCH

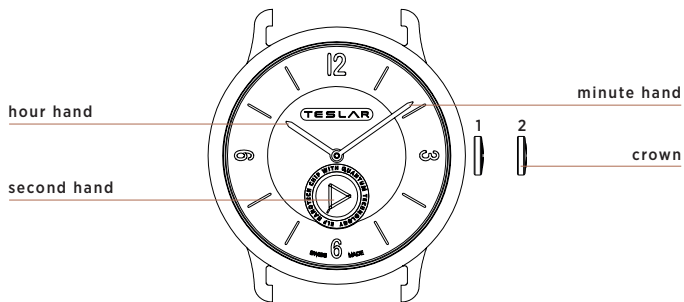

SETTING THE TIME

Pull out the crown to position 2, turn it until the desired time is reached, push it back to position 1.

QUARTZ CHRONOGRAPH

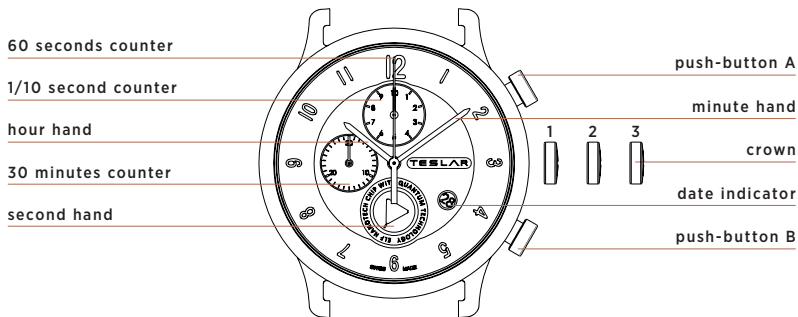

SETTING THE TIME

Pull out the crown to position 3, turn it until the desired time is reached (please note that at every passing of midnight the date changes), return the crown to position 1.

To set the hour hand only (i.e. time-zone change), pull out the crown to position 2 and turn it until the correct time is displayed.

CORRECTING THE DATE

Pull out the crown to position 2 and rotate it: at every passing of midnight the date will change. Once the correct date has appeared, return the crown to position 1.

Note: do not leave the crown in position 2 longer than 20 minutes (time could be lost).

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

1. Pull out the crown to position III (all three chronograph hands are in their correct or incorrect zero position).
2. Keep pusher 2 and 1 depressed simultaneously for at least 2 seconds (the center stop-second rotates by 360° - corrective mode is activated).
3. Press pusher 2 to single step the center stop-second hand. Press and hold pusher 2 to advance the center stop-second hand quickly. Press pusher 1 to advance the next hand.
4. Press pusher 2 to single step the hour counter hand. Press and hold pusher 2 to advance the hour counter hand quickly. Press pusher 1 to advance to the next hand.
5. Press pusher 2 to single step the minute counter hand. Press and hold pusher 2 to advance the minute counter hand quickly.
6. Return the crown to position I.

USING THE CHRONOGRAPH

Before each time measurement operation, make sure that the chronograph counters are set to zero. To return the 30 minutes counter to a zero setting, pull out the crown to position 2 and press push-button B. To restore the 60 seconds counter to a zero setting, pull out the crown to position 3 and

press push-button A; to set the 1/10 second counter to zero, press push-button B (crown in position 3). **Note:** for a quick correction, press the push-buttons mentioned. Return the crown to position 1.

1. TIMING MODE

Crown in position 1.

Start: press push-button A to start timing.

Stop: press push-button A to stop timing and read the elapsed time. By pressing push-button A it is possible to start and stop timing repeatedly: the accumulated measured time is shown.

Reset: press push-button B to set the counters to zero.

2. INTERMEDIATE TIMING MODE

Crown in position 1.

Start: press push-button A to start timing.

Reading the intermediate time: press push-button B to stop timing and read the intermediate time. Press push-button B once more to restart timing and catch up the time elapsed during the interruption. By pressing push-button B again, further intervals or intermediate times can be displayed.

Stop: press push-button A to stop timing. Final time is displayed.

Reset: press push-button B to set the counters to zero.

WWW.TESLARWATCHES.COM

VERTIME B.V.

Amsterdam (NL) - Succursale di Manno
Galleria 1 - Via Cantonale - 6928 Manno - Switzerland
Tel. +41 91 610 8700 - Fax +41 91 610 8741
info@vertime.ch